

BXC6537 XS


# Brandt







FR GUIDE D'UTILISATION  
EN USER GUIDE  
NL GEBRUIKSAANWIJZING  
DA BRUGERVEJLEDNING  
CS NÁVOD K POUŽITÍ  
ES MANUAL DE UTILIZACIÓN

دليل الاستخدام عربي



**Four  
Oven  
Oven  
Ovn  
Trouba  
Horno  
فرن**

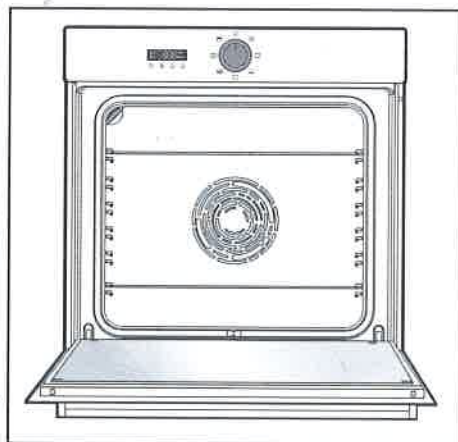



### 3

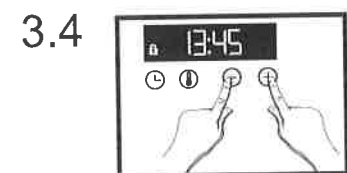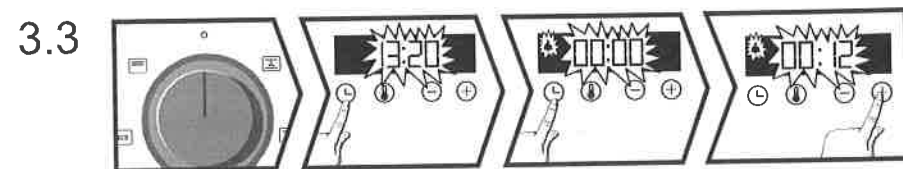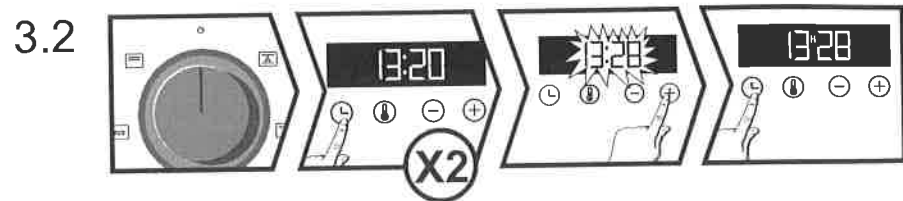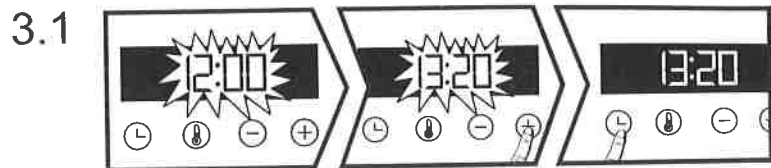




### 4

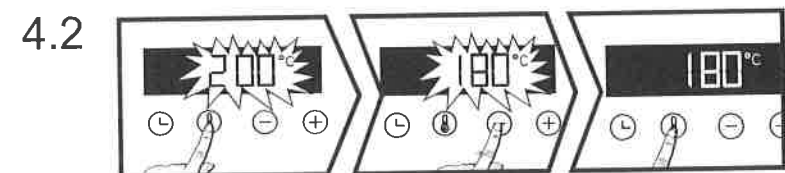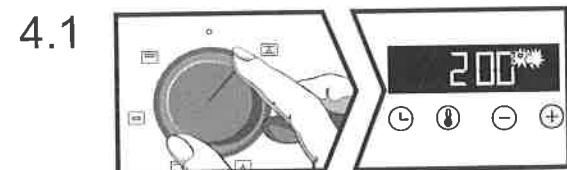

### 4

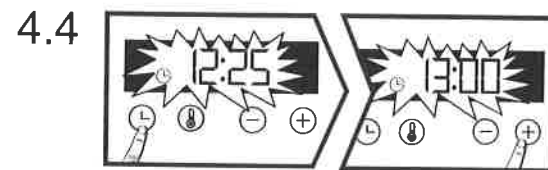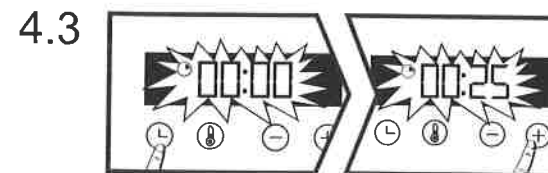


### 5

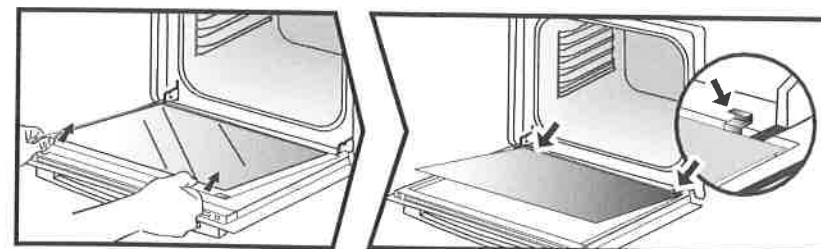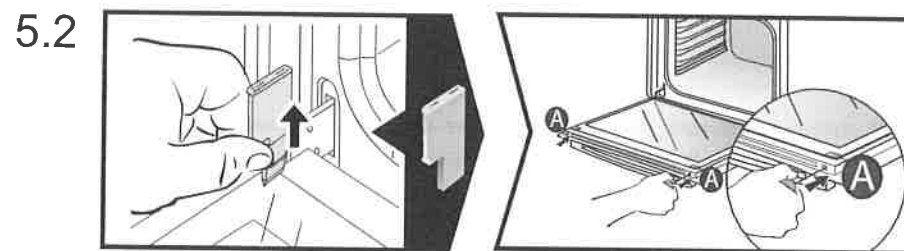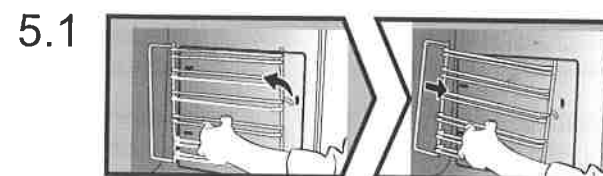




# 1



## 1.1

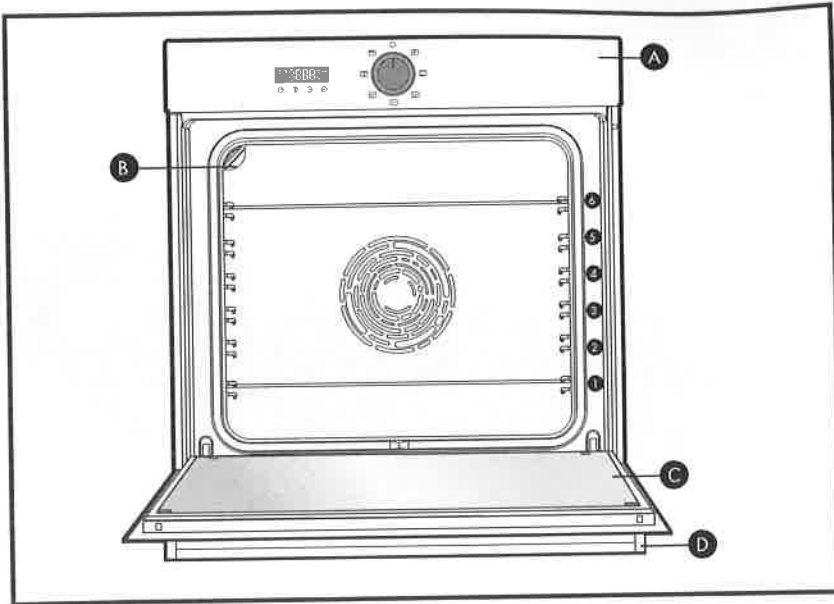



## 1.4

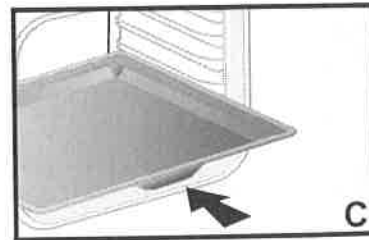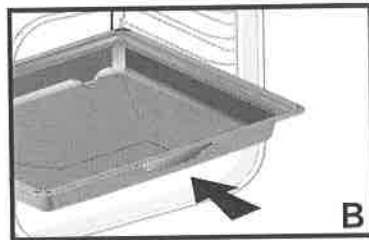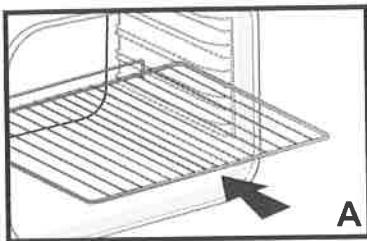

# 2




## 2.1

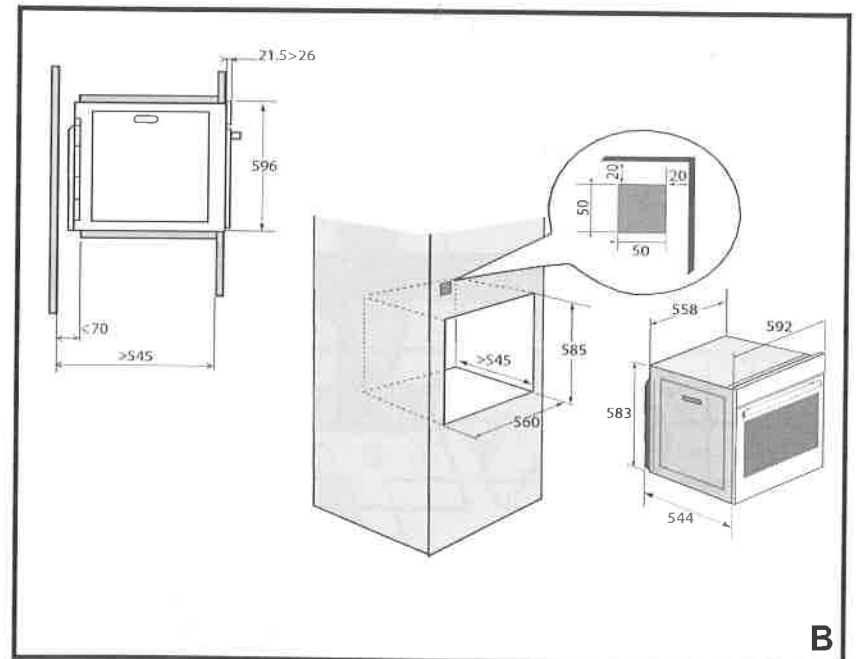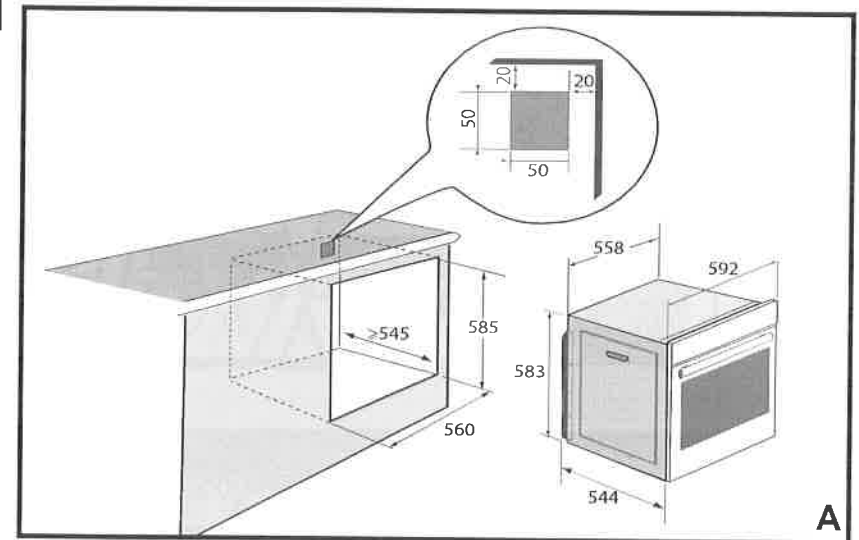


# 5



## 5.2

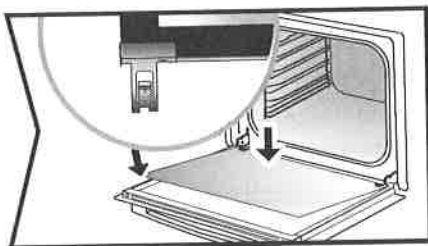

## 5.3

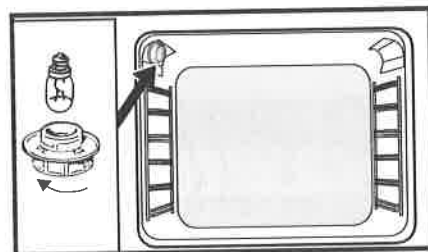

Chère Cliente, Cher Client,

Vous venez d'acquérir un produit **BRANDT** et nous vous remercions de la confiance que vous nous accordez.

Nous avons conçu et fabriqué ce produit en pensant à vous, à votre mode de vie, à vos besoins, pour qu'il réponde au mieux à vos attentes. Nous y avons mis notre savoir-faire, notre esprit d'innovation et toute la passion qui nous anime depuis plus de 60 ans.

Dans un souci permanent de toujours mieux satisfaire vos exigences, notre service consommateurs est à votre disposition et à votre écoute pour répondre à toutes vos questions ou suggestions.

Connectez-vous aussi sur notre site [www.brandt.com](http://www.brandt.com) où vous trouverez nos dernières innovations, ainsi que des informations utiles et complémentaires.

**BRANDT** est heureux de vous accompagner au quotidien et vous souhaite de profiter pleinement de votre achat.



**Important : Avant de mettre votre appareil en marche, veuillez lire attentivement ce guide d'installation et d'utilisation afin de vous familiariser plus rapidement avec son fonctionnement**

Dear Customer,

You have just acquired a **BRANDT** product and we would like to thank you.

We have designed and made this product with you, your lifestyle and your requirements in mind so that it meets your expectations. We have devoted our know-how, our innovative spirit and the passion that has been guiding us for over 60 years.

In an effort to ensure that our products meet your requirements in the best possible way, our Customer Relations department is at your disposal, to answer all your questions and to listen to all your suggestions.

Visit our website [www.brandt.com](http://www.brandt.com) where you will find our latest innovations, as well as useful and complementary information.

**BRANDT** is delighted to assist you every day and hopes you get the most out of your purchase.



**Important: Before using your appliance, read this user guide carefully to familiarise yourself more quickly with its operation.**

## SAFETY INSTRUCTIONS

### IMPORTANT SAFETY INSTRUCTIONS - READ CAREFULLY AND RETAIN FOR FUTURE USE.

This user guide is available for download on the brand's website.

#### Important:

When you receive the appliance, unpack it immediately. Give it an overall inspection. Make note of any concerns or reservations on the delivery slip and make sure to keep a copy of this form. Before starting your appliance, please read this installation guide carefully to familiarise yourself quickly with its operation. Keep this user guide with your appliance. If the appliance is ever sold or transferred to another person, ensure that the new owner receives this user guide. Please become familiar with these recommendations before installing and using your oven. They were written for your safety and the safety of others.

— This oven was designed for use by private persons in their homes. This oven does not contain any asbestos-based components.

— Your appliance is intended for standard household use. Do not use it for commercial or industrial purposes or for any other purpose than that for which it was designed.

— Do not modify or attempt to modify any of the characteristics of this appliance. This would be dangerous to your safety.

— Never place tin foil directly in

contact with the oven floor as the build up of heat may damage the enamel.

— Do not place heavy weights on the open oven door, and make sure that children are able neither to climb nor sit on it.

— Do not use your oven as a ladder or to store any items after use.

— After using your oven, make sure that all the controls are in their stop position.

— The oven must be turned off when cleaning inside the oven.

— Before removing the glass window, allow the appliance to cool down.

 This appliance may be used by children aged 8 years and older, and by persons with impaired physical sensorial or mental capacities, or without experience or knowledge, if they are supervised or have received prior instructions on how to use the appliance safely and have understood the risks involved. Children must not be allowed to play with the appliance. Cleaning and maintenance operations must not be carried out by children without supervision.

— Children must be supervised to prevent them from playing with the appliance.

## SAFETY INSTRUCTIONS

**WARNING:** The appliance and its accessible parts become hot during use. Be careful not to touch the heating elements inside the oven. Children under 8 years old must not be allowed near it unless they are supervised at all times.

— This appliance is designed to cook with the door closed.


— Before pyrolytic cleaning of your oven, remove all accessories and any thick deposits.

— During cleaning, the surfaces may become warmer than under normal conditions of use. It is advisable to keep children away from the appliance.

— Do not use a steam cleaner.

— Before removing the back wall, the appliance must be powered off. After cleaning, the back wall must be put back in place in accordance with the instructions.

— Do not use abrasive cleaning products or hard metal scrapers for cleaning the oven's glass door, as they could scratch the surface and cause the glass to shatter.

 **WARNING:** Make sure the appliance is disconnected from the power before replacing the lamp in order to avoid the risk of electric shock. Change the lamp only when the appliance has cooled down. To unscrew the view port and the light, use a rubber glove, which

will make disassembly easier.

 The electrical plug must remain accessible after installation.

It must be possible to disconnect the appliance from the power supply, either using a plug or by fitting a switch on the fixed wiring system in accordance with installation rules.

If the power cable is damaged, it should be replaced by the manufacturer, its after-sales service department or by a similarly qualified person in order to avoid danger.

— This appliance may be installed either under a worktop or in a cabinet column, as indicated on the installation diagram.

— Centre the oven in the unit so as to ensure a minimum distance of 10 mm between the appliance and the surrounding unit. The material of the unit supporting the appliance must be heat-resistant (or covered with a heat-resistant material). For greater stability, attach the oven to the unit with 2 screws through the holes provided on the side panels.

In order to avoid overheating, the appliance must not be installed behind a decorative door.

# 1 Description of the oven

## 1.1 PRESENTATION OF THE OVEN

- A Control panel
- B Light
- C Door
- D Handle


This oven has 6 positions for the accessories: shelf supports 1 to 6.

## 1.2 DISPLAY



- 🔔 Cooking time
- 🕒 End of cooking
- 🔒 Keypad lock
- 🔥 Timer
- °C Temperature indicator
- ➡➡ Pre-heating indicator
- 🔑 Door lock

## 1.3 BUTTONS

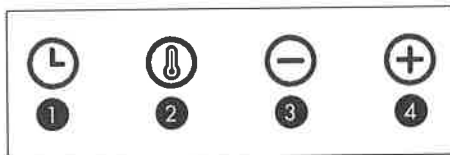


- 1 Set clock and cooking time
- 2 Set temperature
- 3 - button
- 4 + button

## 1.4 ACCESSORIES (depending on model)
 
### A • Anti-tip safety grid

The grid can be used to hold all dishes and moulds containing foodstuffs to be cooked or browned. It can be used for barbecues (to be placed directly on the grid).



Insert the anti-tip safety grid towards the back of the oven.

### B • Multi-purpose 45mm drip pan

When inserted in the supports under the grid with the handle towards the oven door, it collects juice and fat from grilling, and can be used half-filled with water as a double-boiler.

### C • 20mm pastry dish

When inserted in the supports with the handle towards the oven door, it is ideal for baking cookies, shortbread and cupcakes. Its tilted surface makes it practical and easy to use. Can also be inserted into the supports under the grid to collect juice and fat from grilling.

**Tip**  
To avoid fumes when cooking fatty meats, we recommend you add a small amount of water or oil to the bottom of the drip pan.

# 2 Installation

## 2.1 CHOICE OF LOCATION AND FITTING

The diagrams show the dimensions of a cabinet that will be able to hold your oven.

This appliance may be installed either under a worktop (A) or in a column (B). If the cabinet is open, its opening at the back must be 70 mm maximum.

Install the oven in the furniture. To do this, remove the rubber stops and pre-drill a 2-mm diameter hole in the wall of the furniture to avoid splitting the wood. Attach the oven with the two screws. Re-position the rubber stops.

**Tip**  
To be certain that you have properly installed your appliance, do not hesitate to call on a household appliance specialist.

**Caution**  
Before using your oven for the first time, heat it to 200°C empty for around 1 hour. Ensure that the room is sufficiently aired.

## ELECTRICAL CONNECTION

Your oven must be connected with a (standard) power cable with 3 conductors of 1.5mm<sup>2</sup> (1 live + 1 neutral + earth) which must be connected to a 220-240V~ single-phase grid by means of a 1 live + 1 neutral + earth CEI 60083 standard power socket or via an all-poles cut-off device in compliance with the installation rules.

The safety wire (green-yellow) is connected to the appliance's ⊕ terminal and must be connected to the earth terminal of the electrical set-up.

The fuse in your set-up must be 16 amperes.

We cannot be held responsible for any accident resulting from in-existent, defective or incorrect earthing.

**Warning :**  
If the electrical installation in your residence requires any changes in order to hook up your appliance, contact a professional electrician. If the oven malfunctions in any way, unplug the appliance or remove the fuse corresponding to the sector where the oven is hooked up.

# 3 Setting the clock

## 3.1 SETTING THE CLOCK

When switching on the display flashes at 12:00. Set the clock with + or -.

Confirm with ⊖.

If there is a power cut, the clock flashes at 12:00.

## 3.2 CHANGING THE CLOCK

The function selector switch must be in the 0 position.

Press ⊖. The symbol 🔥 appears. Press ⊖ again, adjust the clock setting with + or -.

Confirm with ⊖.

The cooking end time is automatically saved after a few seconds.

## 3.3 TIMER

This function can only be used when the oven is off.

Press ⊖.

The timer flashes.

Set the timer with + or -.

Press ⊖ to confirm. The timer will then start.

Once the time has lapsed, there is a sound signal.

To stop it, press any key.

The time appears again in the display.

NB: You can modify or cancel the timer at any time. To cancel, go back to the timer menu and set to 00:00. Without having to confirm, the adjustment is automatically saved after a few seconds.

## 3.4 KEYPAD LOCKING

Press + and - at the same time until the 🔒 symbol appears on the screen. To unlock the keypad, press + and - together until the 🔒 symbol disappears off the screen.

# 4 Cooking

## COOKING MODES (depending on model)

### 🌀 CIRCULATING HEAT\*

Min temperature 35°C, max 235°C

Recommended for keeping white meat, fish and vegetables moist. For cooking multiple items on up to three levels.

### 🍲 TRADITIONAL PULSE

Min temperature 35°C, max 275°C

Recommended for quiches, pies, tarts with juicy fruits, preferably in an earthenware dish.

### 🔥 GRILL PULSE

Min temperature 180°C, max 230°C

Roasts and poultry are juicy and crisp all over. Slide the drip tray on to the bottom shelf support. Recommended for all spit-roasted poultry or meat, for sealing and thoroughly cooking a leg or a rib of beef. To retain the moist texture of fish steaks.

### 🍲 PULSED BOTTOM

Min temperature 75°C, max 250°C

Recommended for moist dishes (quiches, tarts with juicy fruits, etc.). The pastry will be thoroughly cooked on the bottom. Recommended for recipes which rise (cake, brioche, kügelhopf, etc.) and for soufflés which will not be stopped by a crust on the top.

### 🍲 TRADITIONAL

Min temperature 35°C, max 275°C

Recommended for slow, gentle cooking: rich game, etc. For retaining the juices in red meat roasts. For simmering in a covered casserole, dishes that were begun on the hob (coq au vin, stew).



**ECO\***

Min temperature 35°C, max 250°C

This setting saves energy while maintaining the quality of the cooking.

All types of cooking are done without preheating.

**FULL GRILL****MEDIUM GRILL**

Min temperature 180°C, max 275°C

Recommended for toast, gratin dishes, browning crème brûlée, etc.

**KEEPING THINGS WARM**

Min temperature 35°C, max 100°C

Recommended for letting dough rise for bread, brioche, kügelhopf.

Put the mould on the bottom, not exceeding 40°C (plate-warming, defrosting).

**PIZZA**

Min temperature 35°C, max 275°C

Pre-heat and then put in the oven on the 3rd shelf support.

**BOOST**

Min temperature 35°C, max 275°C

To rapidly pre-heat the oven.

\* Sequence(s) used to obtain the results indicated on the energy label in compliance with European standard EN 50304 and in accordance with European Directive 2002/40/EC:

**Advice on how to save energy**

Keep the oven door closed during cooking.

**4.1 IMMEDIATE COOKING**

The programmer must only display the time. It should not be flashing.

Turn the function selector to any position.

The temperature starts to increase at once. Your oven suggests a temperature, which can be modified.

The oven heats up and the temperature indicator flashes. A series of beeps sounds when the oven has reached the programmed temperature.

**4.2 CHANGING THE TEMPERATURE**

Press

Adjust the temperature with + or -.

Confirm by pressing

**4.3 PROGRAMMING THE COOKING TIME**

Use the immediate cooking programme, then press ; the cooking time flashes and it is now possible to set it. Press + and - to adjust the cooking time.

Your oven has the "SMART ASSIST" function which, when programming a cooking time, will suggest a cooking time which can be modified depending on the selected cooking mode.

See the table opposite:

COOKING FUNCTION (depending on model)	COOKING TIME RECOMMENDATION
TRADITIONAL	30 min
TRADITIONAL PULSE	30 min
CIRCULATING HEAT	30 min
PULSED BOTTOM	30 min
ECO	30 min
MEDIUM GRILL	10 min
FULL GRILL	7 min
GRILL PULSE	15 min
KEEP WARM	60 min
PIZZA	15 min
BOOST	5 min

The cooking time is saved automatically after a few seconds. The time starts to count down as soon as the cooking temperature is reached.

**4.4 DELAYED START**

Proceed as for programmed cooking. After setting the cooking time, press ; the cooking end time flashes.

The display flashes. Set the cooking end time with

+ and -.

The cooking end time is automatically saved after a few seconds. The cooking end time display stops flashing.

**5****Cleaning****CLEANING THE OUTER SURFACES**

Use a window washing product applied to a soft cloth. Do not use abrasive creams or scouring sponges.

**CLEANING INSIDE THE OVEN**

Clean the still-warm oven with a cloth dipped in hot, soapy water and wipe with a lint-free cloth.

**5.1 REMOVING THE SHELF SUPPORTS AND REPLACING THE CATALYTIC SIDE PANELS****Side panels with wire shelf supports :**

Lift the front part of the wire shelf support upwards. Press the entire shelf support and release the front hook from its housing. Then gently pull the whole of the support towards you to release the rear hooks from their housing. Remove the two shelf supports and **the catalytic side panels. Re-install the new elements (side panels) following the procedure in reverse.**

**5.2 CLEANING THE INSIDE GLASS**

To clean the inside glass, remove the door. Before doing this, remove any excess grease with a soft cloth and washing up liquid.

**Warning**

Do not use scouring cleaning products, abrasive sponges or metal scrapers to clean the oven's class door, which may scratch the surface and lead to the glass breaking.

**REMOVAL**

Open the door fully and block it with the plastic wedge provided in your appliance's plastic pouch.

Remove the first clipped glass panel:

Use a tool (screwdriver) to press the slots in order to unclip the glass panel.

Remove the glass panel.

Depending on the model, the door consists of two

additional glass panels, with a black rubber spacer at each corner. If necessary, remove them to clean. Do not soak the glass panels in water. Rinse with clean water and dry off with a lint-free cloth.

**RE-ASSEMBLING THE DOOR**

After cleaning, reposition the four rubber stops with the arrow upwards.

Reposition all of the glass panels.

Slip the last glass panel into the metal stops, then clip it in with the shiny side facing outwards.

Remove the plastic wedge.

Your appliance is now ready for use again.

**5.3 REPLACING THE OVEN LAMP**

**Warning:** Make sure the appliance is disconnected from the power before replacing the lamp in order to avoid the risk of electric shock. Change the lamp only when the appliance has cooled down.

**Bulb specification:**

15 W, 220-240 V~, 300°C, E14 cap.

To unscrew the view port and the light, use a rubber glove, which will make disassembly easier.

**6****Settings****6.1 MENU**

You can adjust different settings on your oven. To do so:

Press until you get to the "MENU" display to access the settings mode.

Press again to scroll through the different settings.

Activate or de-activate the different parameters with + and -; see table below:

	Activate/de-activate the beeping sound of the buttons
	Activate/de-activate demonstration mode

To exit the "MENU", press again.



## 7 ? Anomalies and solutions

You may resolve certain little problems yourself:

**The oven is not heating.** Check that the oven is correctly connected and that your installation's fuse is not out of service. Increase the selected temperature.


**The oven light is not working.** Replace the bulb or the fuse. Check that the oven is correctly connected.

**The cooling fan continues to operate after the oven stops.** This is normal; the fan may continue running until a maximum of 1 hour after cooking to lower the temperature inside and outside the oven. If the fan runs for over an hour, contact the After Sales Department.

## 8 Environment

### CARE FOR THE ENVIRONMENT

- This appliance's packing materials are recyclable. Please recycle them and help protect the environment by depositing them in municipal containers provided for this purpose.

 - Your appliance also contains many recyclable materials. It is therefore marked with this logo to indicate that used appliances must not be mixed with other waste.

The appliance recycling organised by your manufacturer will therefore be conducted in optimum conditions, in accordance with European directive 2002/96/EC on electrical and electronic equipment waste.



Consult your local authority or your retailer to locate your nearest used appliance drop-off points.

- We thank you for your help in protecting the environment.

## 9 Service Calls

### SERVICE CALLS

Any repairs made to your appliance must be carried out by a qualified professional authorised to work on the brand. When calling, please provide the complete references of your appliance (commercial reference, service reference, serial number), so that we can handle your call better. This information appears on the manufacturer's nameplate attached to your equipment.

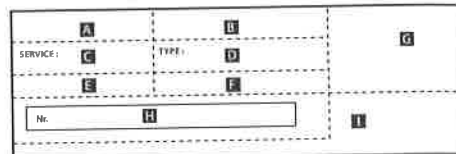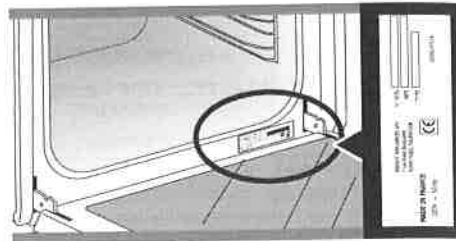

B: Commercial reference  
C: Service reference  
H: Serial number

### GENUINE REPLACEMENT PARTS

During maintenance work, request that only **certified genuine replacement parts** are used.



DISHERS	[Icon]		[Icon]		[Icon]		[Icon]		[Icon]		[Icon]		[Icon]		min
	LEVEL	LEVEL	LEVEL	LEVEL	LEVEL	LEVEL	LEVEL	LEVEL	LEVEL	LEVEL	LEVEL	LEVEL	LEVEL		
<b>Meat</b>															
Roast pork (1kg)	200	2					180	2							60
Roast veal (1kg)	200	2					180	2							60-70
Roast beef	240	2													30-40
Lamb (leg, shoulder, 2.5kg)	220	1			220						200	2			60
Poultry (1kg)	200	2			220		180	2			210	3			60
Large pieces of poultry	180	1													60-90
Chicken thighs					220	3					210	3			20-30
Pork/veal chops					210	3									20-30
Beef ribs (1kg)					210	3					210	3			20-30
Lamb chops					210	3									20-30
<b>Fish</b>															
Grilled fish					275	4									15-20
Cooked fish (bream)	200	3					180	3							30-35
Fish in papillote	220	3					200	3							15-20
<b>Vegetables</b>															
Gratins (cooked foods)					275	2									30
Potato gratin	200	2					180	2							45
Lasagne	200	3					180	3							45
Stuffed tomatoes	170	3					160	2							30
<b>Pastries</b>															
Sponge cake					180	2							180	2	35
Swiss roll	220	3											180	2	5-10
Buns	180	1			210								180	2	35-45
Brownies	180	2					175	3							20-25
Cake - Pound cake	180	1			180	1							180	2	45-50
Clafoutis	200	2					180	3							30-35
Baked custards	185	2											150	2	30-40
Cookies - Shortbread	175	3													15-20
Kugelhupf					180	2							180	2	40-45
Meringues	100	2											100	3	60-70
Madeleines	220	3					200	3							5-10

\* Depending on the model

DISHES	[Icon: Level 1]		[Icon: Level 2]		[Icon: Level 3]		[Icon: Level 4]		[Icon: Level 5]		[Icon: Level 6]		[Icon: Level 7]		[Icon: Level 8]		min	
	LEVEL		LEVEL		LEVEL		LEVEL		LEVEL		LEVEL		LEVEL		LEVEL			
<b>Pastries</b>																		
Madeleines	220	3					200	3										5-10
Choux pastry	200	3					180	3							180	3		30-40
Flaky pastry hors d'oeuvres	220	3					200	3										5-10
Savarin cake	180	3													175	3		30-35
Shortcrust tart	200	1					195	1										30-40
Thin flaky crust tart	215	1					200	1										20-25
Tart made with yeast-based	210	1					200	1										10-30
<b>Other</b>																		
Skewers	220	3			210	4												10-15
Terrine pâté	200	2					190	2										80-100
Shortcrust pizza	200	2																30-40
Dough-based pizza																		15-18
Quiches																		35-40
Soufflé														180	2			50
Pies	200	2																40-45
Bread	220						200		220									30-40
Bread	180				275	4-5												2-3
Casseroles (stews)	180	2												180	2			90-180

\* Depending on the model

**⚠ All °C and cooking times are given for pre-heated ovens.**

N.B: Before being placed in the oven, all meat must remain at least 1 hour at room temperature.

RELATIONSHIP OF SETTINGS TO TEMPERATURE → °F / °C									
Setting	1	2	3	4	5	6	7	8	9 maxi
° Fahrenheit	85	140	195	250	300	355	410	465	525
° Celsius	30	60	90	120	150	180	210	240	275

### Recipe with yeast (depending on model)


Ingredients:

- Flour 2 kg • Water 1240 ml • Salt 40 g • 4 packets of dehydrated baker's yeast

Mix the dough in a mixer and allow to rise in the oven.

**Method:** For yeast-based pastry recipes. Pour the dough into a heat-resistant dish. Remove the wire shelf supports and put the dish on the bottom.

**Pre-heat the oven to 40–50°C with the circulating heat function for five minutes. Stop the oven and allow the dough to rise for 25-30 minutes thanks to the residual heat.**

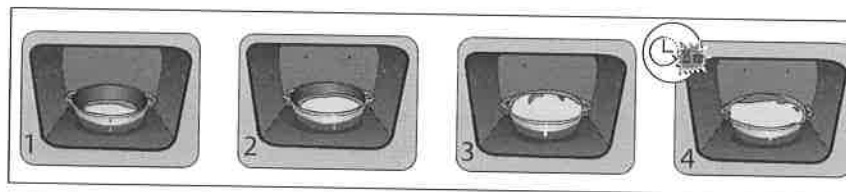

### PERFORMANCE TESTING ACCORDING TO STANDARD CEI 60350

FOOD	COOKING MODES	SHELF	ACCESSORIES*	°C	TIME	PREHEAT
Shortbread (8.4.1)	[Icon: Grill]	4	Deep Tray 45mn	160	20 min 25 min	YES
Shortbread (8.4.1)	[Icon: Grill]	2+4	Deep Tray 45mn+Plat 20	160	20 min 25 min	YES
Small cakes (8.4.2)	[Icon: Grill]	4	Deep Tray 45mn	160	20 min 25 min	NO
Small cakes (8.4.2)	[Icon: Grill]	2+4	Deep Tray 45mn+Plat 20	160	20 min 25 min	NO
Fatless sponge cake (8.5.1)	[Icon: Grill]	3	Grill	150	30 min 35 min	NO
Apple pie (8.5.2))	[Icon: Grill]	3	Grill	180	45 min 50 min	YES
Surface browning (9.2.2)	[Icon: Wavy]	4	Grill	275	3-5 min	YES 5 min

\* Depending on the model